



1. Remove three screws from behind the remote by using a small screwdriver.



2. Carefully remove the top cover with the circuit board on.

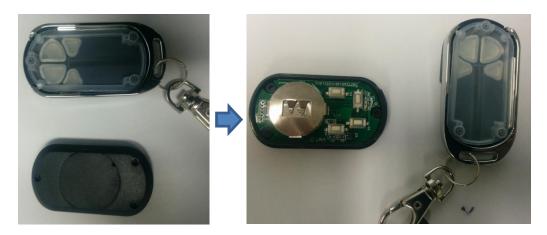

3. Push the battery out as shown in the picture below

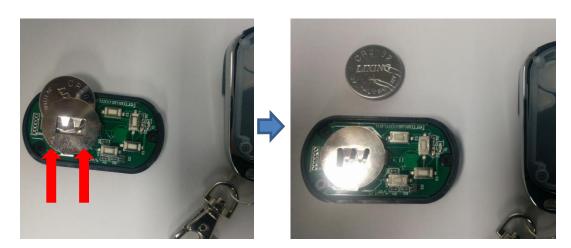



















fermaxaus in Audio Intercoms | Video Intercoms | IP Intercom Systems | Access Control | Sound Distribution | IP Cameras NVR's | Analogue Cameras | DVR's | Intruder Alarms | Residential & Commercial | Security Consultancy


4. The battery has two sides (type CR2032)

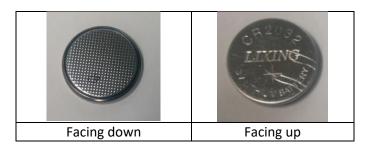

5. Insert the new battery:

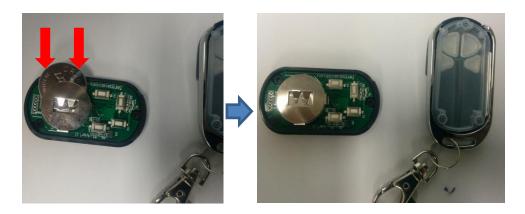

6. Put the remote back together by carefully placing the back part / circuit board on top of front side:

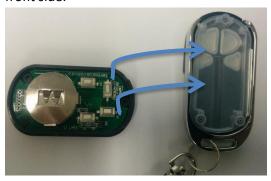

7. Finally, put the screws back on.





